Release buttons then- Press and release the following buttons

The program of the

Enter your 4 digit PIN number &

PROGRAM

Now - go to the garage and look up on the bottom of the door operator

Purple / Blue Lights

You MUST Have these BUTTONS on the bottom of your OPERATOR



PRIMARY CodeDodger & Keypad

AT THE GARAGE PRESS THESE BUTTONS ON THE OPERATOR

Press and hold SQUARE button until both BLUE lights come on

Release SQUARE and wait for ROUND BLUE light

Press and release SQUARE button, see long PURPLE light

IMMEDIATELY go to the KEYPAD and enter your 4 digit PIN NUMBER

The Press









Keypad should now be operating correctly





